


ISO Speed on Legend ISOBUS with Case IH Pro 700

ISO Speed is speed that the VT sends on the CAN BUS. The Legend ISOBUS listens to the BUS to get the correct speed. On the Pro 700 there are some steps that need to be taken to get this to work properly.


On the Legend ISOBUS software, you need to select ISO Ground or ISO Wheel speed as an option. In the Seeder Setup screen, press the ISO Speed soft key until it displays either ISO Wheel or ISO Ground as a speed type.

Note!


Test Speed must be set to 0 for ISO Speed to work.

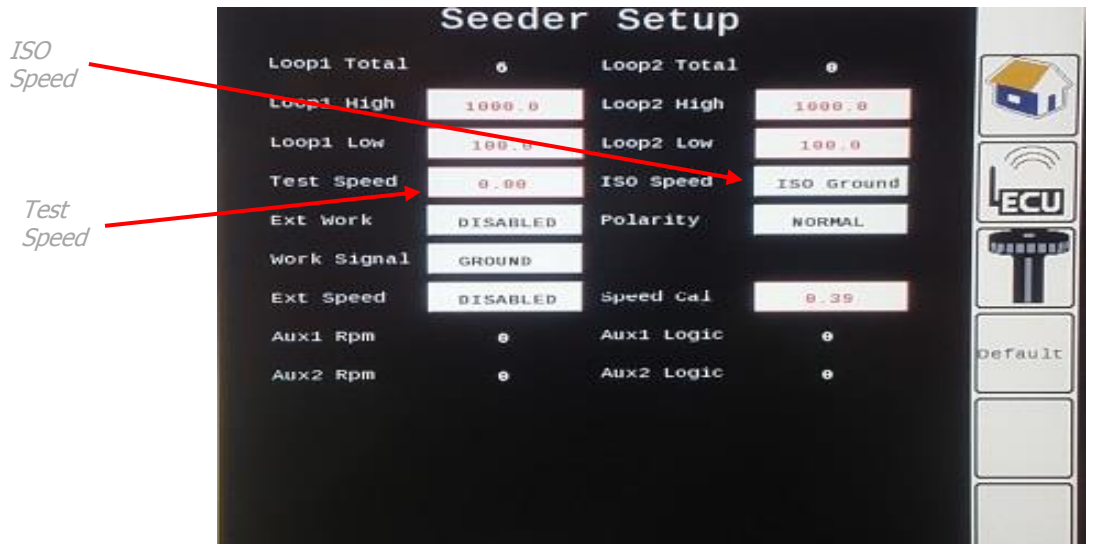


1. On the main screen of the Pro 700 select the Toolbox soft key.

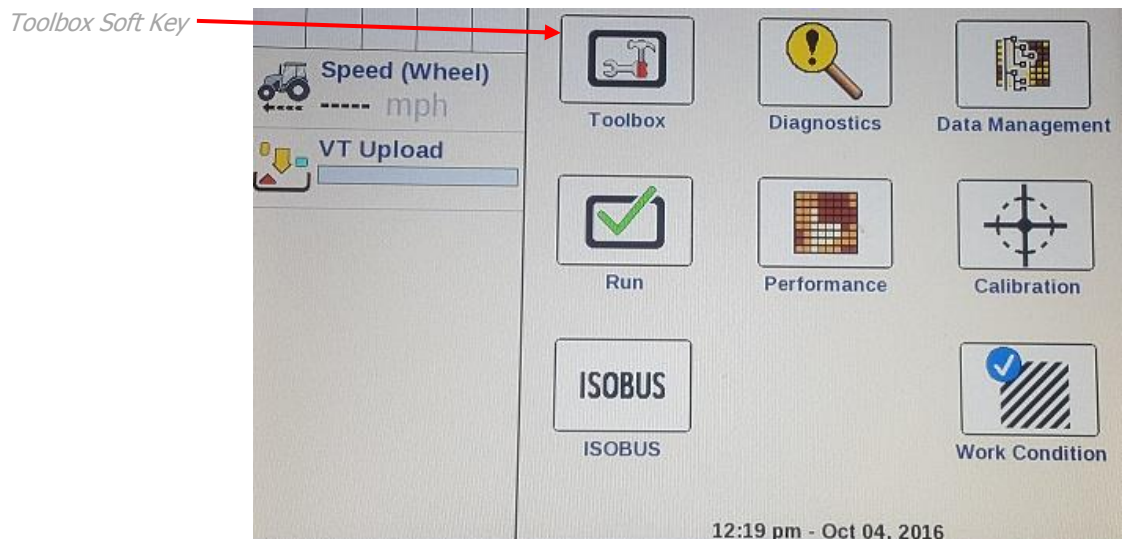

2. On the toolbox screen, select the VT tab at the bottom.

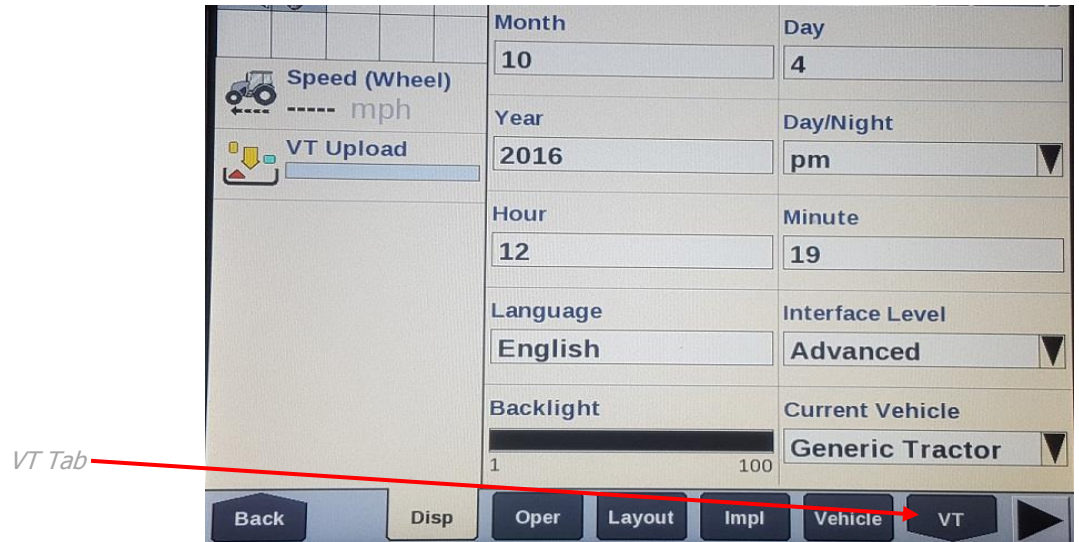

3. Select the drop down menu below Send ISO Speed?

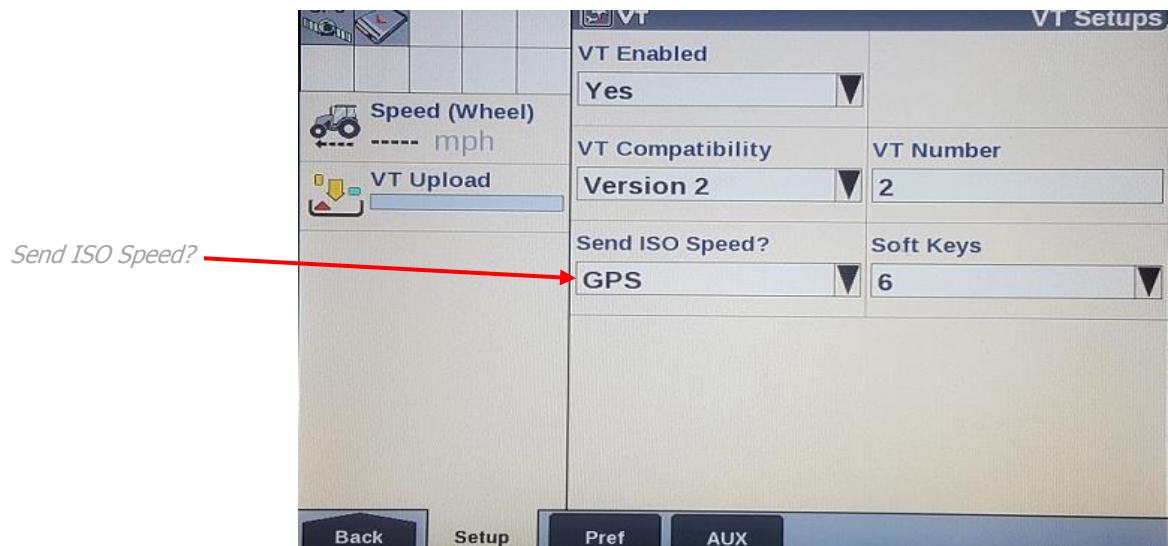

4. Select the appropriate speed source. If you don't choose the proper speed source, the ISO speed will not function on the Legend ISOBUS.

Any questions or concerns contact the Agtron Customer Service Team @ 1-800-667-0640 or customerservice@agtron.com.